



laminarmedica

insulated shipping systems

A total solution
to the problem
of shipping
temperature
sensitive products
worldwide



CHILLPOUCH™

A range of Insulated Shipping Pouches



ChillPouch™

Insulated Shipping Pouches

The ChillPouch™ range has been developed as a single-use, short duration shipper for small quantities of temperature sensitive products.

Suitable for small vials and syringe packs, the padded, insulated design offers both temperature and physical protection for your products.

It also reduces shipping costs by reducing the volumetric weight charges imposed for some shipments.

Secure closure is provided by ultra high adhesion tamper-proof tape, ensuring the security of your products during transit.

The standard system comprises a pouch, ice mat, divider and absorbent, if shipping at chilled temperatures, however our specialist Phase Change Materials (PCM's) can also be utilized for more critical shipments.

For further information contact our Sales Department.



System components:

- The ChillPouch™ is available in two standard sizes - A4 and A3 (internal dimensions) however bespoke solutions can be offered for large quantity orders.
- Ice mats are used to provide cooling of the product. They should be frozen at - 18°C for 24 hours and then conditioned at room temperature for 10 minutes, prior to packing.
- Dividers should be used when ice mats are present in the pouch and where the product being shipped must not freeze. In this case, the divider is positioned between the ice mat and the product being shipped.
- Absorbents are used to reduce the risk of condensate build-up within the pouch, where this may be of concern.
- Standard "Documents Enclosed" pockets are also available.

Laminar Medica Limited

A CliniMed™ Group Company


Unit 4 Tring Industrial Estate
Icknield Way
Tring
Hertfordshire HP23 4JX UK

Tel +44 (0)1442 828664
Fax +44 (0)1442 827056

enquiries@laminarmedica.co.uk
www.laminarmedica.co.uk




THE QUEEN'S AWARDS
FOR ENTERPRISE
2004

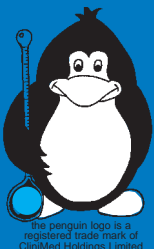

The penguin logo is a registered trade mark of CliniMed Holdings Limited



ISO9001:2000
FM 28012

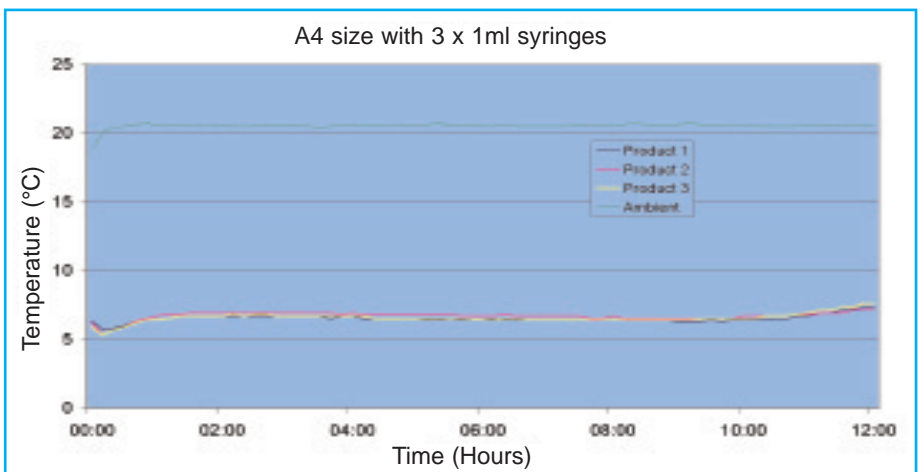

The graph shows the typical performance of a standard system containing all the components, for products that need to be kept chilled during transit.



Ordering Codes:

Size	A4 Internal dimensions	A3 Internal dimensions
Minimum order quantity	80 off	80 off
ChillPouch™	CLP4000	CLP3000